

EN


DANGER:

This product contains lithium battery. Never expose it to strong sunlight or toss it into fire to avoid explosion.

Package Contents

- 1 x Charging Case
- 2 x Earbuds
- 1 x USB Charging Cable
- 6 x Ear Tips (two are equipped on the earphones)
- 1 x User Manual

How to Use
How to Wear

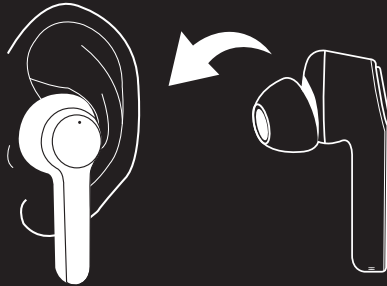

How to Charge

1. Charge the headphones

If you put the headphones in charging box, the headphones red indicator light up, after full charged the indicator turn off. (If your earphone needs to be reset, put it back in charging box and the earphones red indicator will light up if reset succeeded)

2. Charge the Charging Box

Charging Box Indicator Activity	Charging Box State
The 1st indicator blinks	Battery is less than 1/3
The 1st indicator glow solid and the 2nd indicator blinks	Battery is over 1/3
The 1st & the 2nd indicator glow solid; the 3rd indicator blinks	Battery is over 2/3
All three indicators glow solid white	Battery is fully charged

3. Charging Light indication:

Charging box indicator display in white while charging the headphones
Put the headphones into the charging box, it will display the charging box battery and then the first indicator and third indicator will blinks (if only one headphone is put in, then only one indicator blinks); when fully charged, the charging indicators glow solid for a 5 seconds, then turn off.

4. Times of the Charging box Battery (500mAh)

The number of lights indicates the charging case battery status when the headphones are placed in the case.

- ① Indicator light: White
- ② All 3 Indicator on: Provides 2.5 extra headphones charges
- ③ 2 Indicator on (2/3 battery): Provides 2 extra headphones charges
- ④ 1 indicator on (1/3 battery): Provides 1 extra headphones charges.
- ⑤ Low Battery: the first indicator blinks.

Device registration (pairing)

1. Remove the headphones from the charging case.

A voice prompt announces "Power On", the headphones in pair mode and the Bluetooth indicator on left earbud blinks solid 1 second, blink 1 second, after left earbud indicator turn off, right indicator blinks(if the earbud is power off, press touch panel 3 second)

2. Turn on the Bluetooth feature on your mobile device,

Tip: The Bluetooth feature is usually found in the Settings menu.

3. Select your iTeknic IK-BH004 headphones from the device Bluetooth list.

4. Once connected, a voice prompt announces "Connected"

Failure Pairing:

4mins later will power off (Right earbud red & white indicator blinks, Left earbud indicator flash 4s once)

Disconnecting (Over connecting range):

a voice prompt announces "du" if the headphones and cellphones over connecting range (turn off 8 mins later if cannot connected)

Disconnecting (Bluetooth OFF):

Right earbud red & white indicator blinks, Left earbud indicator flash 4s once a voice prompt announces "Pairing Mode", (turn off 4 mins later if cannot connected)

When you remove the headphones from the charging case, they try to reconnect with the most recently connected mobile device.

If the left and right earbuds do not have paired before, it will automatically pair after you remove from charging box; if cannot pairing, please reset the headphones.

How To Reset:

1. Left ear clears pairing mode: when the left earbud is turned on separately, the white indicator light flashes slowly (1s on 1s off), continuously click 6 times multi-function button; in clearing mode, red indicator is on; when clearing finished, red indicator is off.
2. Right ear clear pairing mode: when the right earbud is turned on separately, wait for the white and red indicator lights flash alternately (about 1 minute), continuously click 6 times multi-function button; in clearing mode, red indicator is on; when clearing finished, red indicator is off.

Operation and Functions

Voice Assistant	Standby, Music Play, Long Press L or R earbuds multi-function panel 2s will activate Voice Assistant
Answer call	Press L or R earbuds multi-function panel once
Three-way call	When you are in a call, double-click the L or R multi-function button to answer the incoming call and hang up previous call.
	When you are in a call, click the L or R multi-function button to answer the incoming call and keep previous call.
	When you are in a three-way call, click the L or R multi-function button to switch the call.
	When you are in a call, Press the L or R multi-function button for 2 seconds to reject the incoming call and keep the current call.
End call	Double Click L or R multifunctional panel
Reject call	Long Press L or R multi-function panel 2s reject calls

Play / Pause	Standby, Music Play, Double Click L or R earbuds multi-function activate play or pause
Volume +	TWS Mode: Music Play or Answer phone call, Click Right panel Volume + Right earbud Mono Mode: Music Play or Answer phone call, Click Right panel Volume +
Volume -	TWS Mode: Music Play or Answer phone call, Click Left panel Volume - Note: Cannot use in Mono Mode
Track backward	Triple click left earbud multi-function panel Note: Cannot use in Mono Mode
Track forward	Triple click right earbud multi-function panel Note: Cannot use in Mono Mode
IOS system power display	IOS Device will have battery display after connect with iTeknic IK-BH004 100% 90% 80% 70% 60% 50% 40% 30% 20% (Alarm) 10% (Alarm)

Note:

1. If your earbuds cannot be paired with each other, please follow the instructions to restore the factory settings.
2. Extra attention is needed when wearing the earbuds to avoid accidental pressing of the control button.
3. When restoring to factory settings, please pay close attention to the status of the LED indicators for accurate settings.
4. It is not recommended to wear the two earbuds on different people. If need to do so, please keep the 2 earbuds within 9.8ft in couple earbuds mode.
5. The volume cannot be adjusted in single earbud mode.
6. When the mobile phone has connected to the earbuds with music playing through Bluetooth, if there is incoming call, the music will stop and the mobile phone will play the incoming call ringtone. When the calling hangs up, the phone will automatically revert to the previous phone music via Bluetooth earbuds.
7. Low battery reminder. When the battery is less than 10%. You will be prompted that the battery needs to be charged. You will be reminded every 5 minutes.
8. Power synchronization display: Supports IOS/Android mobile phone battery power synchronization indication.

FAQ

Q: Failed charging of the charging case.

A: Make sure the charging cable is intact and plugged in properly.

Q: Signal of the earbuds is unstable and there is no sound in the earbuds.

A: Please wear the earbuds properly and put your phone in the front pocket when using it outdoor.

Q: Two devices named "iTeknic IK-BH004" are found.

A: Delete both names and search again.

Q: Sound is unclear.

A: Increase the volume slowly on your phone and earbuds and keep them close to each other.

Q: What's the effective range between the two earbuds?

A: Around 3 meters / 9.8 feet.

Warning

- Never dismantle or refit the product to avoid malfunction or fire hazards.
- Keep away from corrosive liquids to avoid damages to the product.
- Keep away from extreme temperatures.
- Keep away from children and pets.
- Don't use the product in thunderstorm weather to avoid malfunction or electric shock.